

Macro lens

Componon 4.0/60-0003

For future tasks in industrial optics, the goal of Schneider-Kreuznach is to continue this tradition with modern, high-quality lenses in the field of digital applications. These lenses in their robust plastic housings are a good solution when using large linear and area sensors in a wide range of applications. A far-reaching and sophisticated optical design with constantly high manufacturing quality is a matter of course. The excellent optical coatings were designed specially for the glass types used. This ensures that the lens is optimally attuned to its application area. Flexible use due to the wide magnification range and the high optical quality with its logically limited starting aperture, low chromatic aberration and optimisation at small imaging distances all combine to make these lenses unique.



Componon 4.0/60

Key Features

- Excellent optical imaging performance when using large sensors
- 100% quality control guarantees reliability and constant quality
- Low maintenance requirements, therefore high system reliability

Applications

- · Machine Vision and other imaging applications
- PCB inspection
- · LCD inspection
- OLED inspection
- Solar inspection

Technical Specifications

F-number	4.0
Focal length	59.9 mm
Image circle	60.0 mm
Magnification	0.5 – 0.04
Transmission	400 - 700 nm
Interface	Leica-Mount
Weight	90 gr.
Option	Optical filter

Contact

Jos. Schneider Optische Werke GmbH Ringstraße 132

55543 Bad Kreuznach

Germany

Phone +49 671 601-205
Fax +49 671 601-286
www.schneiderkreuznach.com
industrie@schneiderkreuznach.com

Schneider Optical Technologies Co., Ltd. Rm. A505 Yingdali Science Park, Hongmian Rd., Futian Free Trade Zone, Shenzhen 518038,

P.R. China

Phone: +86 755 88 32 11 70 Fax: +86 755 88 32 11 75 www.schneiderkreuznach.com info@schneider-asiapacific.com Schneider Optics Inc. 285 Oser Ave. Hauppauge, NY 11788

USA


Phone +1 631 761-5000 Fax +1 631 761-5090


www.schneideroptics.com/industrial industrial@schneideroptics.com



∑ d = 30.0 mm


Componon 4.0/60

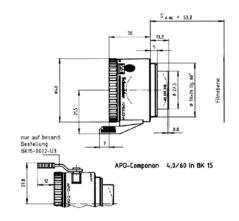




APO-COMPONON 4/60 f' = 59.9 mm $\beta_P = 0.970$ $s_F = -47.1$ mm $s_{EP} = 14.6$ mm $s_F^* = 40.9$ mm $s_{AP}^* = -17.3$ mm


HH' = -1.9 mm

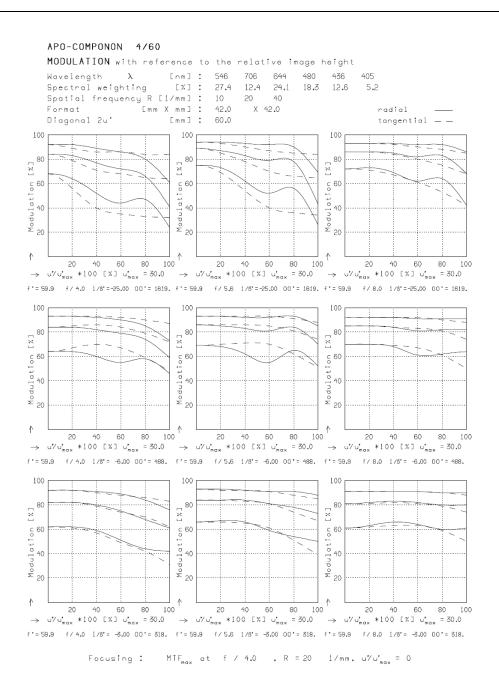




Componon 4.0/60

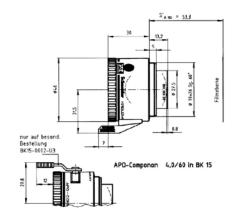





APO-COMPONON 4/60

f'	=	59,9	m m	βp	=	0.970	
s _F	=	4 7.1	m m	s _{EP}	=	14.6	m m
s ; .	=	40.9	m m	sip	=	-17.3	m m
нн,	=	-1.9	m m	Σd	=	30.0	m m

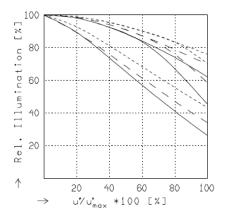

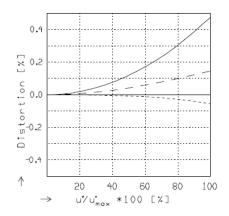

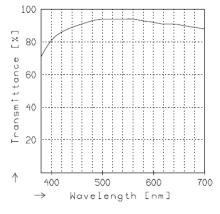

RELATIVE ILLUMINATION

The relativillumination is shown for the given focal distances or magnifications.

f	/ 4.0	f	/ 5 . 6	f	/ 8.0	
	B' = -0.0400 B' = -0.1667 B' = -0.3333		u _{max} = 30.1 u _{max} = 30.0 u _{max} = 30.0		00'=	488,

DISTORTION

Distortion is shown for the given focal distances or magnifications. Positive values indicate pincushion distortion and negative values barrel distortion.

TRANSMITTANCE

Relative spectral transmittance is shown with reference to wavelength.